

S1 66 Motor Plate Mount - Reverse Rotation
View From Front
Standard Rotation see #81 Motor Plate Mount -

Mount Configurations
All AVIAID Mounts are integral to pump. No adapters are required. Separators are .16" or .25" wide. Mount drawings are full size. "Xxxx" indicates hex size in 1/16ths. "xXxx" indicates separator width (1 = .16", 2 = .25", 5 = .50"). "xxXX" indicates Mount #.

