


EXTERNAL PUMPS FOR EVERY APPLICATION!

UNIVERSAL PLATE MOUNT



Examine block for logical mounting points. Using two holes that are parallel with the centerline of the crank is preferred.

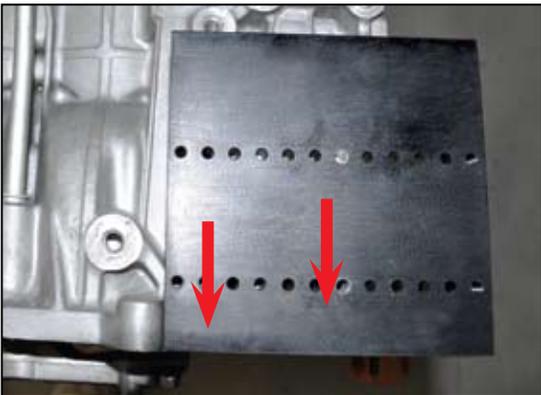

Position the Universal Mounting Plate where you can utilize the pre-drilled holes to mount the pump. Drill holes to attach plate.



Carefully measure the block to determine the position of the plate mounting holes. Trim the plate to remove any excess material.



Measure distance from center of pump shaft to the crank centerline. Aviaid will supply the correct belt and pulleys.

Note: Final adjusting of belt tension is done through using pump mount spacers